

1. Install a CableCARD from your Cable TV provider

- Call or visit your cable TV provider and order a multi-stream CableCARD (M-Card) for a **Cetron InfiniTV digital cable tuner**.
- Insert the **CableCARD**, with the bar code side down, into the CableCARD slot in the back of the InfiniTV 6 ETH.

2. Connect the Cetron InfiniTV 6 ETH to your home network

- Connect the InfiniTV 6 to an Ethernet connection on your network or router using the supplied Ethernet cable. Ensure InfiniTV and your PCs are on the same subnet.
- Attach a coax cable from your cable TV outlet to the *Cable In F-Connector* on the back of the InfiniTV 6 ETH.
- Plug the power supply into the InfiniTV 6 ETH and any standard electrical outlet.
- Turn your Windows 7 or 8 PC(s) on.
- **If your cable provider requires a Tuning Adapter:** connect the small end of the supplied USB cable to the mini USB port on the InfiniTV 6 ETH and the other end to the Tuning Adapter provided by your cable provider.



Steps 3-6 below must be performed on at least one PC.

If you're assigning one or more individual tuners to more than one PC, steps 3, 5 and 6 must be performed on each PC you will be using.

Please note that Dynamic Tuner Pooling is currently a BETA FEATURE.

3. Install the Cetron InfiniTV software on each PC

- Download and run the **Cetron InfiniTV Installer** for the version of Windows you are using from the following link:
www.cetroncorp.com/infinity/support/.

4. Update InfiniTV Firmware and Hardware Image

- Open the Cetron Diagnostics application installed in step 3 from [Start / All Programs / Cetron InfiniTV / Cetron Diagnostics](#).
- Click on the **Update** tab.
- If you have the latest Firmware and Hardware images you will see *"There are no updates available for your InfiniTV"* on the Update tab and you can move to step 5 below; otherwise select one of the next two options, depending on whether you wish to test the beta Tuner Pooling feature.
 - **Install Without Tuner Pooling (recommended):** Make sure the *"Include beta updates"* button is checked **off**.
 - Select the **Hardware version** shown and click the **Update** button. The update can take several minutes.
 - Once the update is finished unplug the power cable to your InfiniTV 6 ETH, wait 10 seconds and plug it back in.
 - Select the **Firmware version** shown and click the **Update** button. The update can take several minutes.
 - Once the update is finished unplug the power cable to your InfiniTV 6 ETH, wait 10 seconds and plug it back in.
 - **Install With Tuner Pooling (beta – advanced users only):** Make sure *"Include beta updates"* button is checked **on**.
 - Select the **Beta Hardware version** shown and click the **Update** button. The update can take several minutes.
 - Once the update is finished unplug the power cable to your InfiniTV 6 ETH, wait 10 seconds and plug it back in.
 - Select the **Beta Firmware version** shown and click the **Update** button. The update can take several minutes.
 - Once the update is finished unplug the power cable to your InfiniTV 6 ETH, wait 10 seconds and plug it back in.
- Re-boot your PC.

5. Launch Media Center and run the Microsoft Digital Cable Advisor tool


- Start [Windows Media Center](#) and navigate to Extras / Extras Gallery.
- Run the **Digital Cable Advisor** and follow all instructions.

6. Set up Windows Media Center for TV

- In Media Center navigate to **Tasks / Settings / TV / TV Signal / Set Up TV Signal** to start the tuner setup process.
- Run through the standard **Set Up TV Signal** process in Media Center, which will take several minutes. **Please note:** While Microsoft's Windows Firewall is automatically configured to receive cable TV video, third-party firewall and anti-virus programs like Norton or McAfee must be manually configured or disabled in order to receive video from cable TV. The required network port settings can be found in the **Detailed InfiniTV Installation Guide** at www.cetonecorp.com/infinity/support/.
- **Activate your CableCARD.** When prompted by Media Center setup, call your cable operator (a phone number may be displayed on the screen) and tell them you need to **pair and activate a CableCARD with a Ceton InfiniTV OCUR digital cable tuner.**
- Provide your cable operator with information from the TV Setup screen. CableCARD activation and pairing status information can also be found on the **CableCARD** tab in the **Ceton Diagnostics** at **Start / All Programs / Ceton InfiniTV / Ceton Diagnostics**.
 - **Note:** you only need to pair the CableCARD and InfiniTV with your cable operator once. If you're using InfiniTV 6 with more than 1 PC, you can skip this part of step 6 when setting up InfiniTV on your other PCs.
- Choose the appropriate program guide data for your local cable TV system.

7. Start enjoying 6 live channels of HDTV at once!

- Go to **Media Center / Live TV** and watch your favorite cable TV programs or
- Go to **Media Center / Guide** and record up to six HD shows at once!

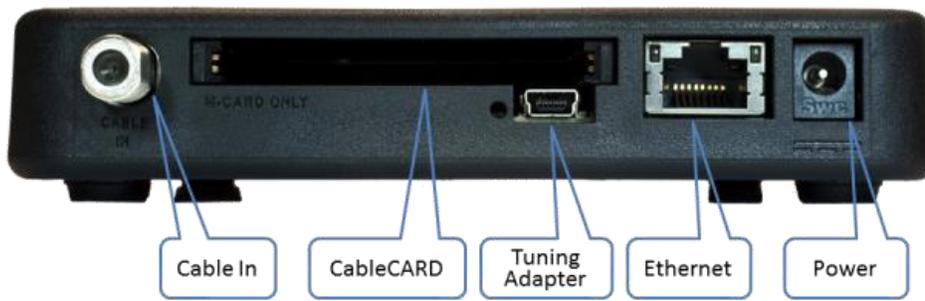

More detailed installation instructions, set-up videos and access to Ceton Support can be found at www.cetonecorp.com/infinity/support/

Warranty Information available at www.cetonecorp.com/warranty